Tenter Weg 2-8 ◆ 42897 Remscheid ◆ Germany Fon +49 (0) 2191 - 9672 - 0 ◆ Fax - 40 www.honsberg.com ◆ info@honsberg.com

HONSBERG

FLEX-F

Product Information

Flow Transmitter / Switch FLEX-F



- Compact robust flow switch / transmitter
- Combination with temperature switch or transmitter possible
- Mo moving parts in the medium being monitored
- Only one medium-contact material
- Simple to use
- Very low pressure loss
- Various sensor lengths and models
- Short response times for a calorimetric sensor
- Cable outlet infinitely rotatable
- Small installation width, therefore very narrow pipework

Characteristics

The FLEX-F flow sensor monitors fluid media. Its compact form combines the built-in sensor and converter / counter which, depending on the model, trigger a limit value output (push-pull, compatible with PNP and NPN) or an analog output (4..20 mA or 0..10 V) or both. The limit switch can optionally also be operated as frequency output. .

The converter / counter record two process parameters: the flow speed of the medium and its temperature. Both parameters can be assigned to the analog output or to the switching output. The following output combinations are available:

Flow		Temperature	
Analog output	Switching	Analog output	Switching
	output		output
•			
	•		
•	•		
•			•
	•	•	

The switching output can be ordered as a minimum or a maximum switch.

Technical data

Sensor	calorimetric measurement principle		
Process	screw-in thread G 1/4 A G 1/2 A,		
connection	Push-in sensor Ø12 mm		
Metering range	water 2150 cn	n/s	
	or 3300 cm/s oil available on	request	
Measurement	 	he installation location and	
accuracy	flow conditions		
-	typically ±10 %	of full scale value or 2 cm/s,	
	magazirad in th	a Tining I F 0/ of full apple	
	value	e T-piece ±5 % of full scale	
Repeatability	±1 %		
Operating	PN 100 bar, 200 bar available on request		
pressure	,	· ·	
Metering range	070 °C (high temperature model 0120 °C		
Temperature	with gooseneck)		
Operating temperature	070 °C		
Storage	-20+80 °C		
temperature	-2000		
Temperature	4 Kelvin/s		
gradient			
Materials	Sensor	1.4571	
medium-contact	I I a constante	4.4005	
Materials, non- medium-contact	Housing Plug	1.4305 PA6.6	
modium comuci	Clip	PA6.6	
Adjustment	<u> </u>		
Supply voltage	by means of magnet 24 V DC ±10 %		
Current	max. 100 mA	,	
requirement			
Switching output	transistor outpu		
		ort circuits and polarity	
	reversal)	ay	
Switching		scale value, temp.: approx. 2	
hysteresis	°C		
Display	yellow LED (On = Normal / Off = Alarm /		
rapid flashing = Programming)		Programming)	
Analog output	420 mA / Load 500 Ohm max. or 010 V		
Electrical	for round plug of	connector M12x1, 4-pole	
connection			
Weight	approx. 0.2 kg (standard version)		
Ingress protection	IP 67		
Conformity	CE		



rofessional Instrumentation "MADE IN GERMANY

pi-ho-fka-flex-f_e V1.00-00

Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com


TRUMENTS

Product Information FLEX-F

q

M12×1


Wiring

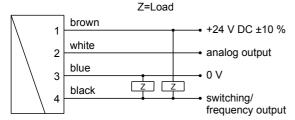

Connection example: PNP NPN



Dimensions

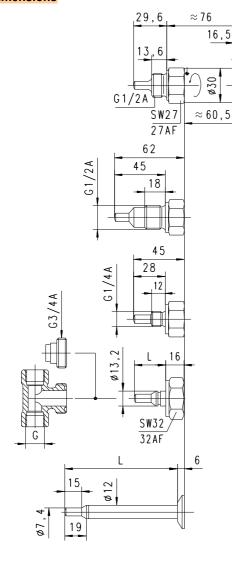

Gooseneck option

A gooseneck (optional) between the electronics head and the primary sensor provides complete freedom in the orientation and reading direction of the sensor.

 
Handling and operation

Installation

Before the electrical installation, it must be ensured that the supply voltage corresponds with the data sheet.

In order to ensure the sensor's maximum insensitivity to interference, the flow should run from bottom to top (best degassing even at the slowest flow speed).

Screw-in sensors are to be sealed using Teflon tape, so that the inwards flow is directed to the incised cross. This is the position at which measurement is undertaken in the factory, and which guarantees the best results. The sensor must be screwed in using its hexagonal spanner only.



There are various options for installing the 12 mm push-in sensors (OMNI-F012):

The stainless steel crimp screw joint is screwed into a G $^{1}\!/_{2}$ threaded drilling. For this, a G ¹/₂ welded-on nozzle is also available. When a suitable seal is used, this arrangement can take pressures up to 40 bar. The stainless steel threaded connection is first tightened by hand, and then by $^1\!/_4$ of a turn, using a spanner. The connection ring of the threaded connection can then no longer be removed from the sensor, and the immersion depth can therefore not be changed further.

The plastic cone is fitted to the separately available welded-on nozzle intended for this purpose, or to a suitable T-piece, using the union nut provided (available in brass or stainless steel). The union nut must be tightened to a torque of 20 Nm. It is possible to loosen the connection again, and so the immersion depth can be changed. This arrangement is suitable for pressures up to 10 bar.

When installing the push-in sensors, it should also be noted that the sensors are directional (comply with the marking on the housing).

For all types of installation, the reduction of the sensor tip must lie completely in the open flow cross-section, wherever possible at a depth of 1/3..1/2 of the pipe diameter.

Run-in and run-out sections of 10 x D should be provided.

Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com

HONSBERG

Product Information

Programming

The electronics contain a magnetic contact, with the aid of which different parameters can be programmed. Programming takes place when a magnet clip is applied for a period between 0.5 and 2 seconds to the marking located on the label. If the contact time is longer or shorter than this, no programming takes place (protection against external magnetic fields).





After the programming ("teaching"), the clip can either be left on the device, or removed to protect data.

The device has a yellow LED which flashes during the programming pulse. During operation, the LED serves as a status display for the switching output.


In order to avoid the need to transit to an undesired operating status during "teaching", the device can be provided ex-works with a "teach-offset". The "teach-offset" value is added to the currently measured value before saving (or is subtracted if a negative value is entered).

Example: The switching value is to be set to 70 % of the metering range, because at this flow rate a critical process status is to be notified. However, only 50% can be achieved without danger. In this case, the device would be ordered with a "teach-offset" of +20 %. At 50 % in the process, a switching value of 70 % would then be stored during "teaching".

Normally, programming is used to set the limit switch. However, if desired, other parameters such as the end value of the analog or frequency output may also be set.


The limit switch can be used to monitor minima or maxima.

With a minimum-switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is again exceeded.

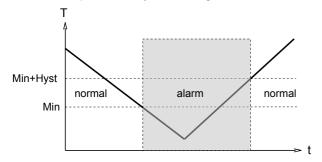


FI EY-E

With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

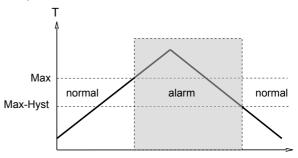


A switchover delay time (t_{DS}) can be applied to the switchover to the alarm state. Equally, one switch-back delay time (t_{DR}) of several can be applied to switching back to the normal state.

In the normal state the integrated LED is on, in the alarm state it is off, and this corresponds to its status when there is no supply voltage.

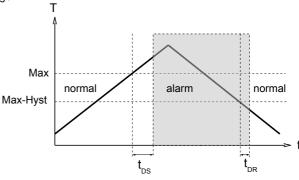

In the non-inverted (standard) model, while in the normal state the switching output is at the level of the supply voltage; in the alarm state it is at 0 V, so that a wire break would also display as an alarm state at the signal receiver. Optionally, an inverted switching output can also be provided, i.e. in the normal state the output is at 0 V, and in the alarm state it is at the level of the supply voltage.

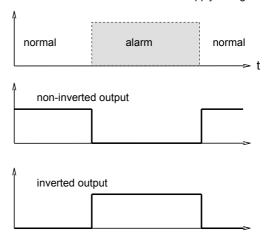

A Power-On delay function (ordered as a separate option) makes it possible to maintain the switching output in the normal state for a defined period after application of the supply voltage.

A subsidiary of

Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com

O temperature to switching output

Function for switching output

Switching output level

Н

R

0

10.

minimum switch

maximum switch

O frequency output

standard output

O inverted output



Product Information FLEX-F Ordering code **Options** Special measuring range for flow: cm/s Max. 300 cm/s (standard = 150 cm/s) O=Option Special measuring range for temperature: ľС 1. Connection size Maximum 120 °C (standard = 70 °C) 008 connection G 1/4 A Minimum -20 °C (standard = 0 °C) 015 connection G 1/2 A °C 013 system fastener Ø13.2 Special range for analog output: 012 push-in sensor Ø12 cm/s <= Metering range (standard = metering **Process connection** • • Η male thread for insertion into the system Т Special range for frequency output: cm/s T-piece °C <= Metering range (Standard = Metering ranpush-in sensor with variable ٧ • insertion depth **Connection material** End frequency (max. 2000 Hz) Hz stainless steel 1.4571 • • • • Κ Sensor 4. Switching delay 028 28.0 mm • (from Normal to Alarm) 029 sensor length 29.6 mm • 0 045 45.0 mm Switchback delay • G 3/8..G 1/2 031 sensor for T-piece (from Alarm to Normal) G ³/₄..G 2 037 050 50 mm • Power-On delay (0..99 s) • 070 70 mm (time after power on, during which the • 100 insertion sensor 100 mm outputs are not actuated) • 150 150 mm • 200 200 mm Switching output fixed Unit for analog output °C flow rate to analog output Special hysteresis (standard = 4 % EW) 1% O temperature to analog output 6. Analog output Gooseneck current output 4..20 mA (recommended at operating temperatures ○ Voltage output 0..10 V above 70 °C) **Switching output** 7. If the field is not completed, the standard setting is selected switching output push-pull automatically. Μ O switching output NPN (open collector) 8. Measurement parameter to switching output Accessories flow to switching output

- Device configurator ECI-1
- T-pieces for system connection Ø13.2
- Weld-on adapter for insertion sensor Ø12
- Compression fitting for insertion sensor Ø12
- Flange for insertion sensor Ø12 •
- Cable/round plug connector (KB...) see additional information "Accessories"

